

YOUR SET INCLUDES:

- 1x Front Splitter
- 14x Bolt M6
- 14x Secure Nut M6
- 28x Washer M6
- Installation Manual



PLEASE NOTE. These instructions are for guidance only. It is your responsibility to ensure that installation is undertaken in a safe and correct way. We strongly recommend you leave the installation to a qualified professional.

1 CHECK THE FITTING.

Line up the splitter to the bumper's bottom. Level splitter edges with the bumper edges, near the wheels on both sides. (this fitting should be done by two individuals)

2 MARK DRILLING POINTS.

With levelled splitter (pt.1) mark the points through the splitter and the bumper every 15-20cm. Use 6mm drill to make holes where the splitter connects with the bumper.


3 Install the splitter.

Insert enclosed screws through the drilled holes in the splitter and the bumper. Secure with nuts.


! IMPORTANT

You need to use polyethylene glue if the gap between splitter's edge adjoining bumper and drilled hole is more than 3cm.


Glue needs to dry for minimum 24h before driving.

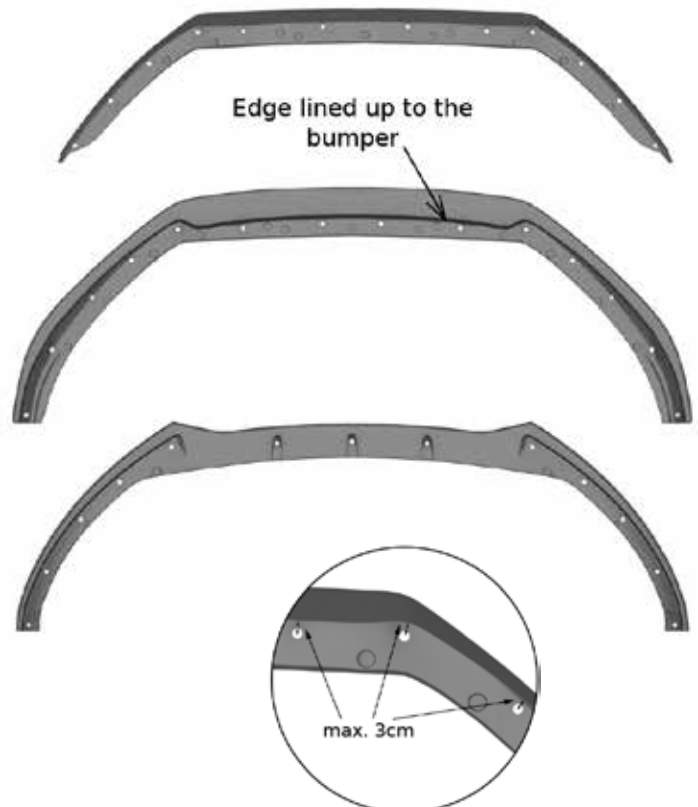

✔ BRAVO!
SPLITTER MOUNTED CORRECTLY.

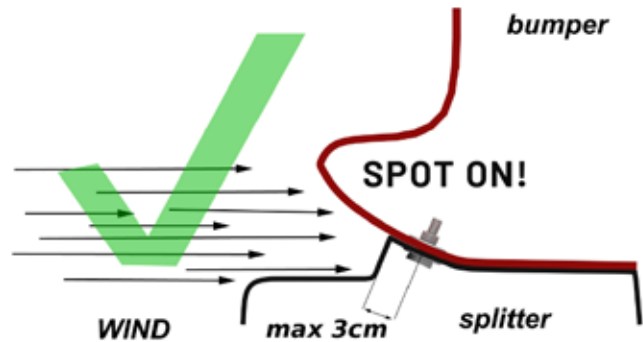

✔ OK.
THIS IS ACCEPTABLE.

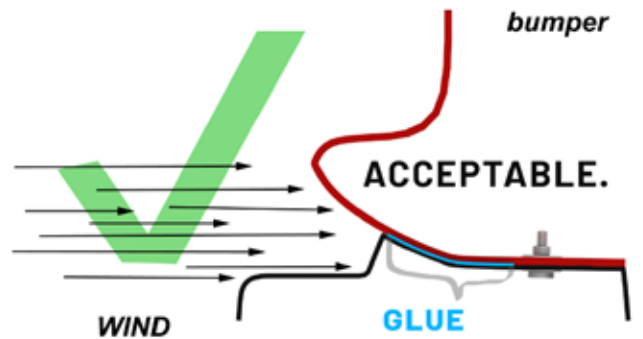

✘ NOT ACCEPTABLE.
WIND COULD CAUSE DAMAGE TO THE SPLITTER IF IT'S INCORRECTLY
POSITIONED OR IF THE BOLTS ARE LOOSE.

